

You do not need to take the TIPM to a Dealer for installation. It is easily done yourself in a half-hour or less and will save you hundreds of dollars. It does not need to be reconfigured except under very rare circumstances. The TIPM will automatically accept a new VIN# as it synchronizes with the vehicle upon installation. The reset procedures described herein will help ensure a smoother synchronization. Please follow attentively



Pre-Installation Checklist

- Make sure all fuses and relays are well seated by gently pressing on them.
- Make sure all fuses and relays match your OLD TIPM. (Not Necessary if we REPAIRED your TIPM).



Fuse





Relay



Installation video

Scan the code to be directed to our installation video or simply visit www.tipmrebuilders.com/installation

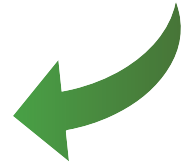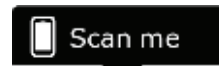

Tools you'll Need



Socket Wrench
13mm with
10 or 12mm sockets



Flat Screwdriver



Zip Tie, String
or Wire



Scissors

READY TO INSTALL

Follow the installation checklist on the back to begin. Watching the video first is highly advisable.

INSTALLATION CHECKLIST

- 1** ○ Remove Battery Cables with socket wrench.
 - Disconnect Negative cable first, then Positive.
 - Connect Battery Cables together with zip tie/string and keep cables away from battery posts.
 - Open TIPM lid and disconnect power cable of TIPM
- 2** ○ Unseat the TIPM from its cradle.

Using a flathead screwdriver, gently pry the eplastic tabs that hold the TIPM into the cradle. Take your time.
- 3** ○ Unplug wire harness from the TIPM.

Remember to slide any red locking sliders before pulling levers, and pushing any tabs needed to unseat a plug. Re-watch video if necessary. Wiggle and take your time.
- 4** ○ Remove old TIPM
Set aside for Core Buyback Progam.
- 5** ○ Position purchased TIPM and re-insert Plugs.
 - You cant make a mistake because every plug will only go into its socket. Notice the color coding of plugs and sockets.
 - Be sure plugs are firmly seated and any levers are fully closed and then locked with any red locking sliders present.
- 6** ○ Pop TIPM back into Cradle.

Should snap back into place
- 7** ○ Reconnect TIPM Power Cable, then reattach/ close TIPM lid.
- 8** ○ Cut Zip Tie and reconnect Battery Cables to Battery.

This time, POSITIVE FIRST, then Negative (for Safety). Ready for "Soft Reset"!

SOFT RESET

Do this first thing after installing your TIPM & before starting your vehicle for the first time. You may have to do several soft resets if you continue to see temporary false dashboard warning lights/ other anomalies.


For Vehicles with Key

STEP 1



Insert Key

STEP 2

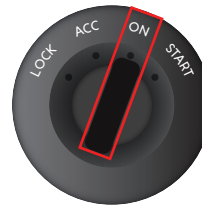

Turn Key to Aux/On position (just short of cranking - Don't crank)

STEP 3



Hold for 120 Seconds. Then, turn off and remove key

For Vehicles with Push Start

STEP 1



Push Start button 2x

STEP 2



Wait 120 Seconds

STEP 3



Push Start button again & start as normal

Having trouble?

Scan the QR code on the other side of this page to view our varies installation and troubleshooting videos. If you have any further questions or concerns give us a call at 818-798-5558.